

# INSTALLATION INSTRUCTIONS

## ESSENTIAL SERIES™ Automatic Soap/Sanitizer Dispenser

### What's included

Dispenser, key, permakey, mounting template, 4 screws, 4 drywall anchors

### You'll need

Drill, ¼" bit, screwdriver, 4 D batteries, soap/sanitizer bottle from UniFirst


### Optional accessories

Mounting plate, drip tray (if not above counter)

#### STEP 1

### Locate mounting holes


Use the mounting template (or the dispenser temporarily mounted on one screw) to locate and mark 4 well-distributed holes.

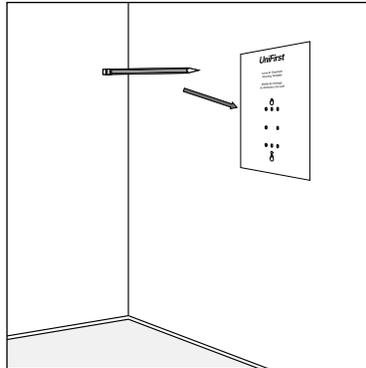

#### STEP 2

### Drill mounting holes


Drill 4 ¼" holes. Insert drywall anchors until flush.

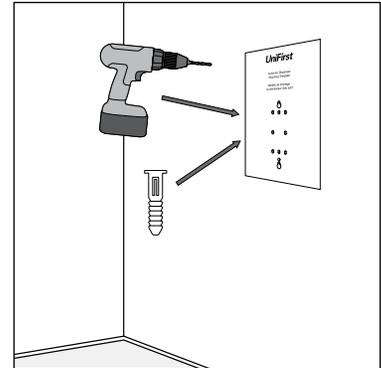

#### STEP 3

### Mount dispenser


Hang dispenser on 1 temporary central screw. Drive all 4 screws into anchors (moving central screw last).

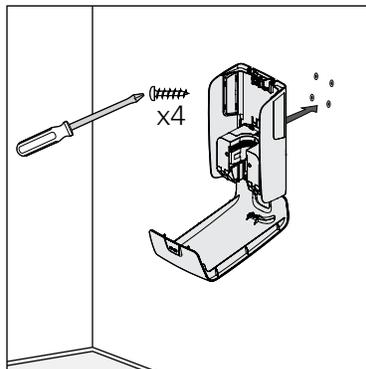

#### STEP 4

### Load batteries and bottle


Load 4 D batteries (matching polarity), insert refill bottle by pressing until it locks, close cover.

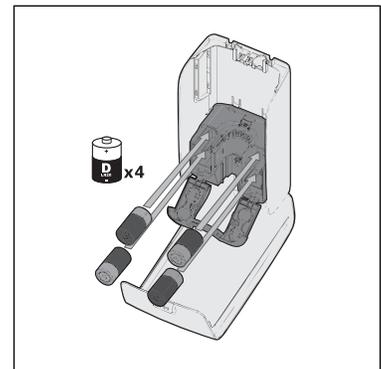

#### STEP 5

### Test

Place hand under sensor until soap dispenses.

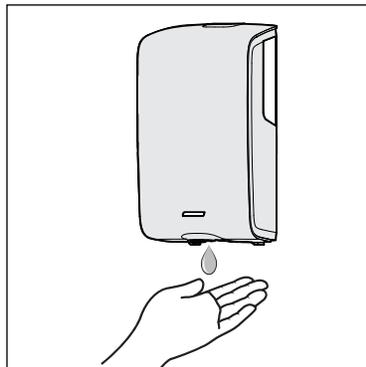

#### SCAN

Scan QR code for support



### Alternative Adhesive tape installation

- Clean dispenser back and mounting area thoroughly using the wipe provided.
- Press tape firmly to dispenser.
- Press and hold dispenser firmly to wall for 1 minute.
- Wait 24 hours before inserting a soap/sanitizer bottle.