

INSTALLATION INSTRUCTIONS

ESSENTIAL SERIES™ Metered Spray Air Freshener Dispenser

What's included

Dispenser, key, permakey, mounting template, 4 screws, 4 drywall anchors

You'll need

Drill, ¼" bit, screwdriver, 2 AA batteries, compatible metered spray refill from UniFirst


Install tip

Do not install above other dispensers

STEP 1

Locate mounting holes


Use the mounting template (or the dispenser temporarily mounted on one screw) to locate and mark 2 holes.

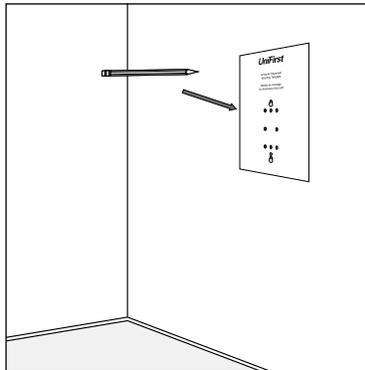

STEP 2

Drill mounting holes


Drill 2 ¼" holes. Insert drywall anchors until flush.

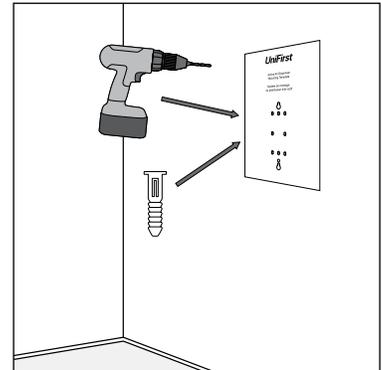

STEP 3

Mount dispenser


Hang dispenser on one screw. Insert the screw and tighten. Add second screw and tighten.

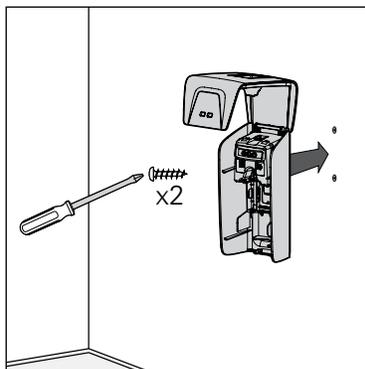

STEP 4

Power


Insert 2 AA batteries (matching polarity), close cover.

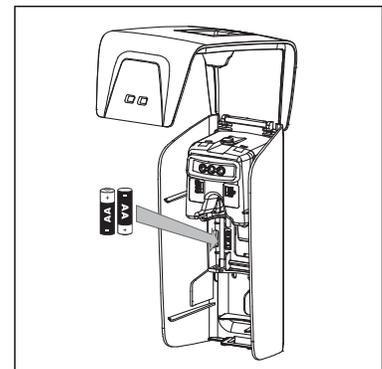

STEP 5

Load spray can

Insert spray can by pressing until it locks, close cover.

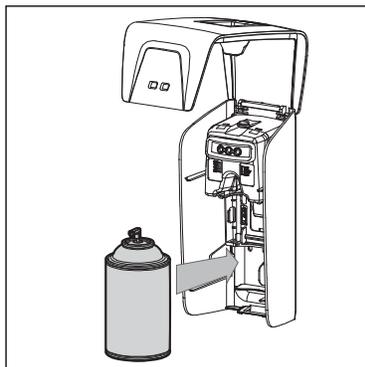

SCAN

Scan QR code for support



Alternative

Adhesive tape installation

- Clean dispenser back and mounting area thoroughly using the wipe provided.
- Press tape firmly to dispenser.
- Press and hold dispenser firmly to wall for 1 minute.
- Wait 24 hours before inserting metered spray refill.